

## H.C.B-C1184 HINO CRANKSHAFT FRONT OIL SEAL INSTALLER (J08C)



\* This tool is designed for preventing oil seal from damage while installing. Save time and labor. \* Application: HINO 10.5?15?17 TON \* Oil seal genuine no.: BZ4820E

Rating: Not Rated Yet

**Price:**

Sales price:

Discount:

[Ask a question about this product](#)

Manufacturer: [HCB Specialty Tools](#)

### Description

**STEP 1** Remove the old oil seal from the crankshaft.

**STEP 2** Apply the oil seal installer to the crankshaft.

**STEP 3** Insert the oil seal into the crankshaft.

**STEP 4** Remove the oil seal installer from the crankshaft.

**STEP 5** Apply the oil seal to the crankshaft.

**STEP 6** Apply the oil seal to the crankshaft.

**STEP 7** Apply the oil seal to the crankshaft.

**STEP 8** Apply the oil seal to the crankshaft.

**STEP 9** Apply the oil seal to the crankshaft.

**STEP 10** Apply the oil seal to the crankshaft.

